



Advanced Location Solution

Senior Living

The Inovonics Advanced Location solution delivers precise floor and room location in real time and on alarm, helping you to find residents, staff and essential equipment more quickly, which can lead to improved care delivery and staff efficiency.



Superior Technology for Faster Response Times and Improved Efficiency

Real Time Location

Our Find Them feature allows caregivers and community staff to more easily locate a resident in real time¹ for medication administration, family visits or other time-sensitive contacts and allows for tracking of movement over longer periods of time.

Alarm Location

Our alarm location feature gets you to the right place² more quickly when a pendant alarm is generated.

Asset and Staff Tracking

- Asset tags allow you to accurately locate essential equipment in real time to improve efficiency and support loss prevention measures.
- Staff badges provide real time tracking capability to further improve response times and drive accountability

Precise and Timely Location Determination

- Enables faster response times
- Can help to ensure compliance with medication timeframes
- Allows for more efficient use of your staff
- Supports better resident outcomes and enhances satisfaction

Cloud Processing of Location Data³

- Provides data visibility across multiple properties to allow for continuous improvements to accuracy
- Leverages powerful cloud technologies to provide valuable data insights
- Enables new features and updates without the need for a site visit
- All Inovonics cloud solutions are HIPAA compliant

Compatible with Existing Inovonics Based Emergency Call Systems

- Leverages existing network infrastructure
- Offers ease of installation
- Scalable to deliver your desired location accuracy
 - Locators can cover specific rooms, zones or floors with industry-leading accuracy
- Certified for installation in UL 2560 listed emergency call systems

Learn more, watch video at:
www.inovonics.com/newsolutions



Small and more powerful than ever

Large Alarm Light

Bright and continuous to confirm activation

Vibration Confirmation

Immediate assurance of successful activation

High Contrast Button


Easy to see, with raised dome to locate by touch

Waterproof Housing

Sealed housing achieves IP67 waterproof rating for use in shower or bath

Twist-Lock Battery Door

For quick and easy battery changes. Unlocks with alarm clearance card.

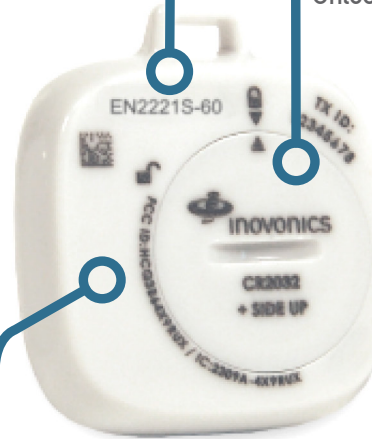

Supports advanced location features

Low Battery Light

Provides five day warning to residents and staff

Smart Power Management

State of the art battery system provides continuous power, a six-month coin cell battery life in use and a two-year shelf life in storage mode.

Advanced Multi-Function Lights



Alarm Activation

When activated, pendant vibrates briefly and light flashes red until alarm is cleared.



Alarm Clearance

Light flashes blue when magnetic card is used or button pattern is pressed.



Low Battery

Light blinks yellow to notify residents and staff.

Required Hardware



EN7380

Senior Living Gateway
Provides cloud access for senior living applications including fall detection and advanced location. Runs in parallel with EchoStream® network coordinator and repeater infrastructure



EN5060

Locator
Leverages the EchoStream network to deliver advanced location information to the Inovonics cloud

Additional Hardware



ADVL1280

Asset Tag



ADVL1290

Staff Badge



ADVL2291

Staff Badge with RFID
Can be used with access control systems

Pendant Accessories



ACC680-BU

Magnetic alarm clearance card



ACC681-BU

Replacement neck lanyard



ACC682-BU

Replacement wristband



ACC684-BU

Replacement battery door



Disclaimers

- ¹ The Inovonics advanced location solution provides a last known location for any location-enabled device sold by Inovonics. Last known location updates approximate real time changes in position. Location update latency will vary based on device movement (or lack thereof), communication paths and network traffic.
- ² Location accuracy is a function of the quality of the installation, including thorough testing both upfront and on an ongoing basis. Please follow all recommended best practices as provided by Inovonics.

Disclosures

- ³ The location information is an enhancement to basic functionality and can only be accessed through an active subscription to that service. Without an active subscription, alarm messages will be transmitted, but the advanced location information will not be provided. Additionally, the real time location features will not be available without an active subscription.